


Remarks for Wiring Diagram

Symbol	Coloring	Connected circuit	System	Color used in wiring diagram
B BW BY BR	Black Black/white Black/yellow Black/red	Grounding Ignition, Meter illumination and Washer motor Starter Ignition	Starting	●
W WB	White White/black	Charging, E.S.S. relay, Tachometer and Ammeter Ammeter	Charging	●
R RW RB RY RL	Red Red/white Red/black Red/yellow Red/blue	Headlight, upper beam and Backup switch Headlight, lower beam Passing switch, Dome light and Seat belt warning Meter illumination, Wiper/washer switch ill. and Radio Backup light	Lighting	●
G GW GR GY GB GL	Green Green/white Green/red Green/yellow Green/black Green/blue	Stop light, Hazard flasher unit and Horn Tail light, Parking light, Front & rear side marker light and license plate light Dome light, Door switch and Lighting switch R.H. turn signal lights (front & rear) and indicator light Horn L.H. turn signal lights (front & rear) and indicator light	Signal	●
Y YR YB YG YW	Yellow Yellow/red Yellow/black Yellow/green Yellow/white	Fuel gauge and Oil pressure gauge or light Water temp. gauge Seat belt warning light Parking brake Charging indicator light and Seat belt switch	Gauge and indicator	●
L LW LR LB LY LO	Blue Blue/white Blue/red Blue/black Blue/yellow Blue/orange	Wiper/washer switch, Alternator (S terminal) and Air-con relay (B) terminal Radio, Cigarette lighter, Wiper motor and Heater switch Heater fan switch and Oil pressure gauge Heater switch and Air-con (B) terminal Heater switch Wiper motor	Others	●


Example:

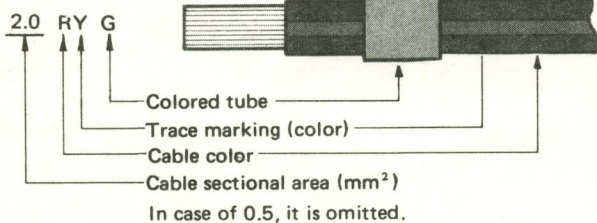

Nominal size (designated by sectional area in mm ² of wire)	SAE gauge No.	Permissible current	
		Within engine compartment	Other areas
0.5	20	7A	13A
0.85	18	9A	17A
1.25	16	12A	22A
2.0	14	16A	30A
3.0	12	21A	40A
5.0	10	31A	54A

Note: The boxed symbols on diagram denote the locations of the parts, ground, etc. as shown in the following table. CB, CE, CG and CI in the symbols indicate body, engine compartment, grounding point and instrument panel, respectively.

Symbol	Part name	Location	Symbol	Part name	Location
CB-1	E.S.S. (Engine Speed Sensor) relay	Lower part of left side front pillar (Above the fuse block)	CE-3	Solenoid valve	Beside the ignition coil
CB-2	Parking brake lever switch	Above the guide roller for parking brake cable	CE-4	E.I.C. (Electronic Ignition Control) unit	Side of distributor body
CB-3	Seat belt switch	Inside of driver's seat belt buckle	CE-5	E.V.R. (Electronic Voltage Regulator)	Inside of the alternator
CB-4	Fuse block	Lower part of left side front pillar	CG-1	Body grounding point (Front)	Side of battery support
CB-5	Inhibitor switch	Inside of gearshift lever bracket	CG-2	Frame grounding point (Front)	Slide of left frame, engine compartment
CB-6	Backup light switch	Rear upper side of transmission	CG-3	Engine grounding point (Front)	Left side of cylinder block
CB-7	Stop light switch	Brake pedal support bracket	CG-4	Body grounding point (Cabin)	Fore of driver, under the instrument panel
CB-8	Connector of front and frame	Under floor mat, right side of passenger's seat	CI-1	Air-con (B) terminal	One the wiring harness, side of left reinforcement
CB-9	Connector of frame and rear body wiring harness	Rear part of right side rear body frame	CI-2	Air-con relay (B) terminal	Along with the air-con (B) terminal
CB-10	Door switch L.H.	Lower part of left side rear pillar	CI-3	Seat belt warning timer	Left under side of instrument panel
CB-11	Door switch R.H.	Lower part of right side rear pillar	CI-4	Seat belt warning buzzer	Back side of combination meter case
CB-12	Fuel gauge unit	Left upper side of fuel tank	CI-5	Turn signal flasher unit	Fore of driver, under the instrument panel
CE-1	Wiper motor	Left side of front deck	CI-6	Hazard warning flasher unit	Along the turn signal flasher unit
CE-2	Washer motor	Lower side of washer liquid tank			

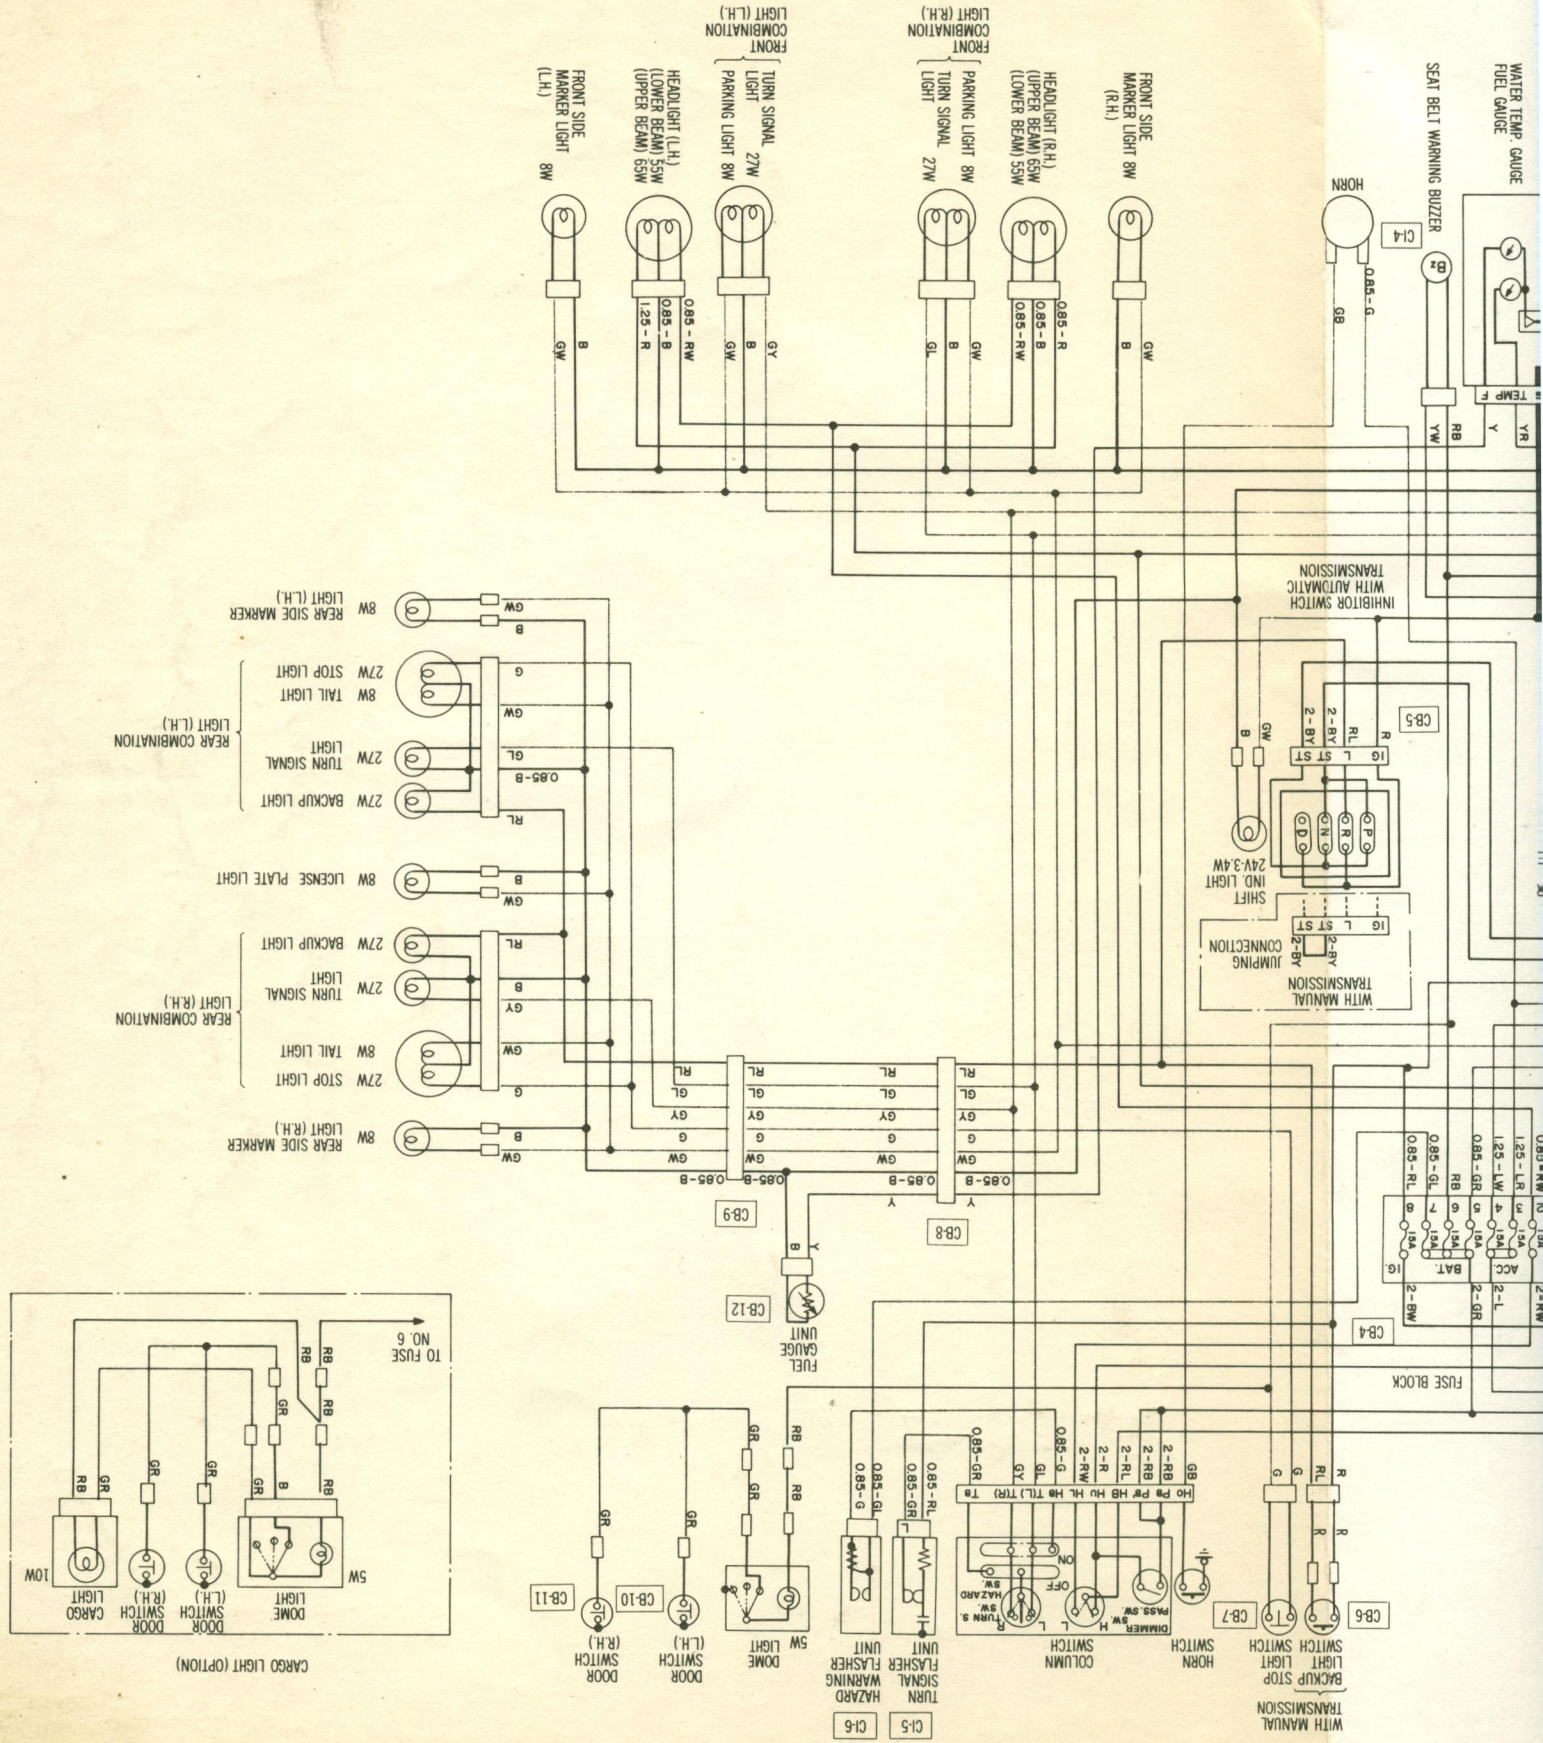

WATER TEMP. GAUGE
FUEL GAUGE

SEAT BELT WARNING BUZZER

HORN

FRONT SIDE
MARKER LIGHT 8W
(R.H.)

HEADLIGHT (R.H.)
(UPPER BEAM) 65W
(LOWER BEAM) 55W



FRONT
COMBINATION
LIGHT (R.H.)
TURN SIGNAL
LIGHT 27W

PARKING LIGHT 8W

FRONT
COMBINATION
LIGHT (L.H.)
TURN SIGNAL
LIGHT 27W

HEADLIGHT (L.H.)
(UPPER BEAM) 55W
(LOWER BEAM) 65W

FRONT SIDE
MARKER LIGHT 8W
(L.H.)

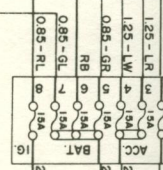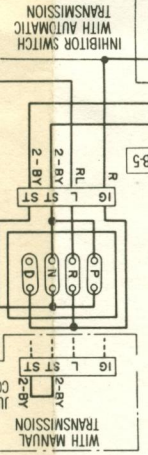

BACKUP STOP
LIGHT SWITCH
WITH MANUAL
TRANSMISSION

HORN
SWITCH

COLUMN
SWITCH

TURN
HAZARD
FLASHER
UNIT

TURN
HAZARD
FLASHER
UNIT


DOOR
SWITCH
(L.H.)

DOOR
SWITCH
(R.H.)

DOOR
SWITCH
(L.H.)

DOOR
SWITCH
(R.H.)

CARGO LIGHT (OPTION)

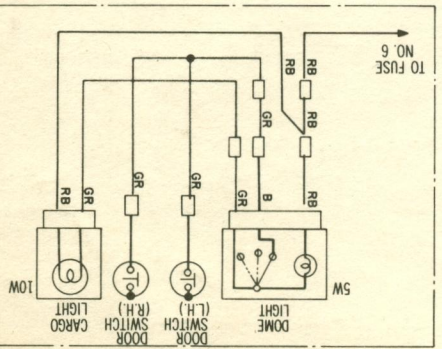

Color used in wiring diagram																	
------------------------------	---	---	---	---	---	---	---	---	--	---	---	---	---	---	---	---	---

